

WASTED WATER GOES BACK TO BASIN

- Open check valve. Check rubber seal, extend coil spring and remove debris. Fig.3

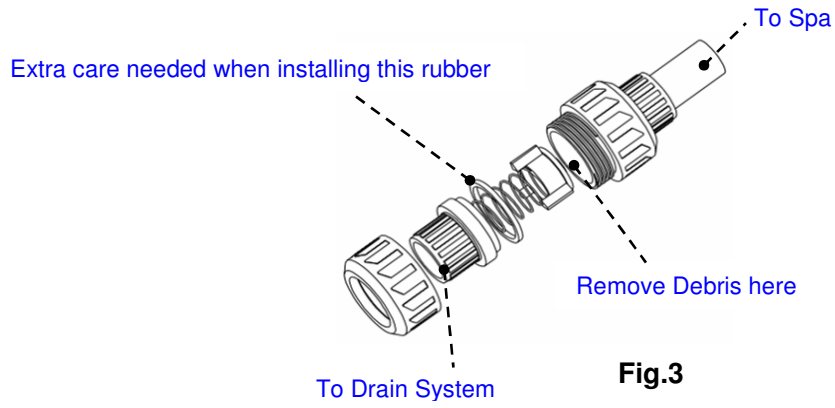


Fig.3