

Auto-Fill Operating Instructions

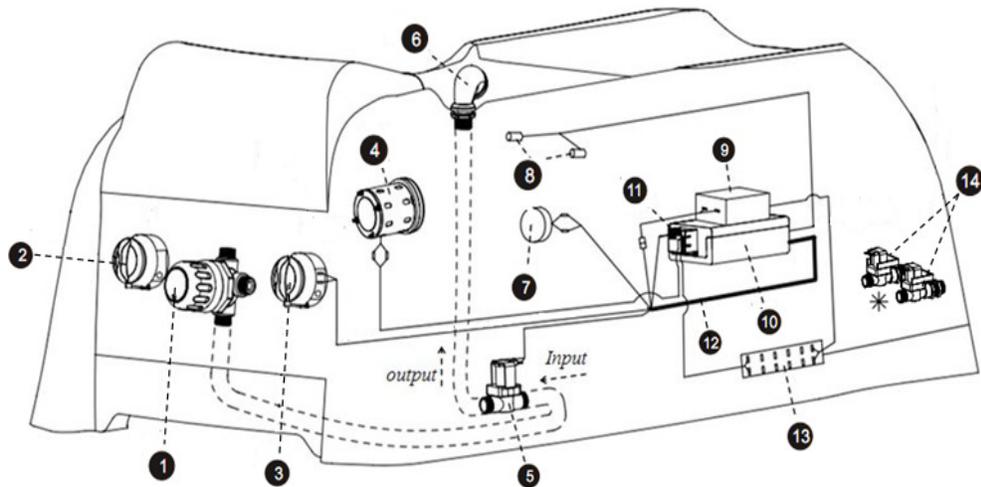


Fig.1

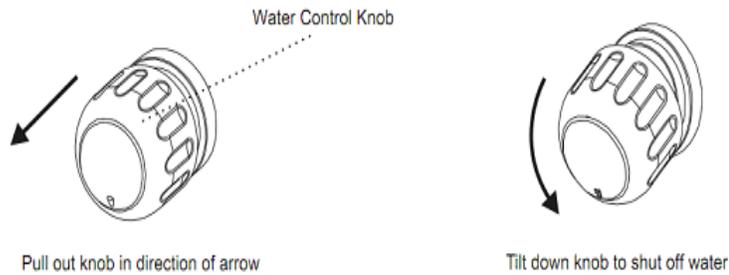


Fig.2

1. **Hot / Cold Mixer Valve: Auto-fill unit:** Find marking-“V” on the knob cover. Warm water “V” at 6 o'clock. Turn to 8 o'clock for Hot water and to 4 o'clock for Cold water. **Non-Auto-fill** unit is equipped with lever handle. Emergency shut off Fig.2 Pull out & Tilt down
2. **Drain Knob:** Turn to 2 o'clock to open Drain stopper and Drain pump. There is no power drain action if your unit is not equipped with drain pump. Turn back 12 o'clock to close drain stopper and off the drain pump.
3. **Auto-Fill / Jet knob :**
 - > Auto-fill unit: Turn Auto-fill Knob to 2 o'clock & release to fill up water. Water will automatically stop at sensor level (#8). Whirlpool jet (#4) and Tub light (#7) will be activated. Turn Auto-fill knob any time to turn off or on whirlpool jet during this cycle.
 - > None Auto-fill unit: Turn to 2 o'clock to turn on Whirlpool-Jet. Turn back to 12 o'clock to turn off Whirlpool-Jet.

4. **Whirlpool motor Jet**
Install Jet Cover with “Pure-Flo” marked on the top



Fig.3

5. **Solenoid Valve :** Electrical valve for turning-on/off water to tub. Please **Note:** Units built before Sept/2011 was single Solenoid located at # 5. After Sept/2011 revised with Dual Solenoid located at rear of spa #14

6. **Water Spout inlet:** Can be pulled out for hand spray
7. **LED light:** Will be turned on when Whirlpool Jet running and Off when Jet turned off
8. **Auto-fill Sensors:** Clean often for accurate water level sensing by using sand buffer.
9. **24VDC Power supply:** Auto-fill power supply. Green light indicates Power OK.
10. **Auto-fill control box:** White box; central auto-fill electronic control unit
11. **Whirlpool Relay:** Control On/Off Whirlpool Jet.
12. **Auto-fill interconnection cable set.**
13. **Power strip:** Red light switch indicates power on.
14. **Dual Solenoid valve:** Electrical valve for turn-on / off water to tub (* For unit after Sept-2011)