

HOT AND COLD WATER SUPPLY LINES


Carefully connect 1/2" ID supply hoses (not provided) to fresh water sources. Shut-off valves (not provided) should be utilized. Valves should be placed outside the tub for easy access.

Before water line connections, please follow below:

- Do not use Teflon (white-plumbing-tape) at 1/2" hot/cold connector water inlet. Hand turn the inlet hoses to connectors and add 1/2 turn with wrench

Determine if your spa chair is used for a new construction of a salon or a replacement spa chair.

1. *New construction:* Make sure to remove any and all debris and/or dust from current hot cold water pipes before hooking up to spa. Suggested direction to remove debris: turn on water and drain into a bucket or container. See illustration below:

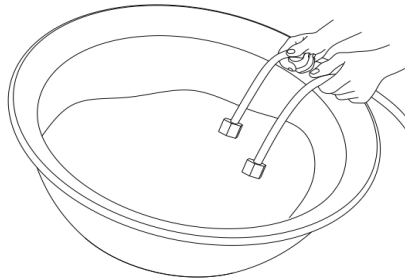

2. *Replacement Spa:* Always use new hot/cold water hoses when connecting a new spa chair to prevent debris, such as old rubber particles, from clogging drain and potential of leaking

